




 
Quick Setup Guide - First Steps

Before Starting

Fold the arm down and remove the cable cover.

Connect power supply and monitor or projector and fix the cables by fastening the cable tie (supplied cable tie can be unfastened by pressing the lug).

Move the arm up and the Visualizer will start automatically.

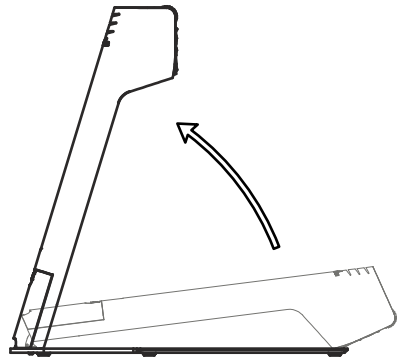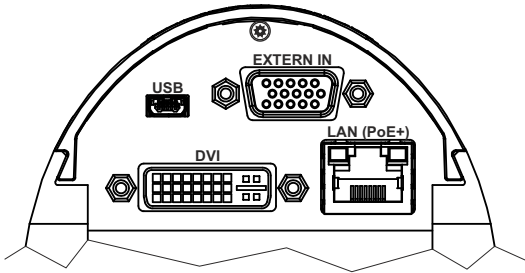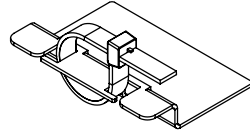

Power Key



The Visualizer will be switched on and off by folding the arm up and down.

Additionally, the Visualizer can be switched on by pressing the POWER key on the camera head quickly. And by keeping the POWER key pressed for 4 seconds, the Visualizer will be switched off (standby).

Basic Menu Settings

When the Visualizer is switched on the first time, the Quick Setup Guide will be started automatically on-screen (visible on DVI output). Use the arrow keys to navigate through the menu.

Language

Select the desired language for the on-screen menu.

Ethernet Settings

The IP-address, Subnet Mask and Gateway IP-address can be set automatically by a DHCP-server or manually.

Time Settings

The Visualizer offers the possibility to use the internal clock or an external time server (provided a time server IP address and Internet connection).

Further information will be found on www.wolfvision.com and on the supplied CD-ROM.